

DeckBuild

Release Notes

11/15/11

RELEASE NOTES

VERSION 3.40.13

NEW FEATURES

- Introduce a column for the current RMS error in results table of optimizer.

VERSION 3.40.12

ALTERATIONS AND ENHANCEMENTS

- Improve Extract to check for existence of its input file before launching.

VERSION 3.40.9

ALTERATIONS AND ENHANCEMENTS

- Improve system command to interact correctly with any redirection of output to a temporary file.
- Update Extract to support recently introduced impurities, materials and electrical parameters.

VERSION 3.40.8

NEW FEATURES

- Update Extract to support recently introduced impurities, materials and electrical parameters.

VERSION 3.40.6

NEW FEATURES

- Introduce ansysexporter, a command to execute the utility of that name in a separate process.

VERSION 3.40.4

ALTERATIONS AND ENHANCEMENTS

- Update Extract to support recently introduced impurities, materials and electrical parameters.

VERSION 3.40.3

ALTERATIONS AND ENHANCEMENTS

- Update Extract to support recently introduced impurities, materials and electrical parameters.
- Improve minslope function of Extract to accept zero bounding values correctly.

VERSION 3.40.2

NEW FEATURES

- Introduce smovie, a command to execute utility of that name in a separate process.

VERSION 3.40.1

ALTERATIONS AND ENHANCEMENTS

- Update Extract to support recently introduced impurities, materials and electrical parameters.

VERSION 3.40.0

ALTERATIONS AND ENHANCEMENTS

- Update Extract to support recently introduced impurities.
- Introduce support for hole current in Extract by analogy with electron current.

VERSION 3.38.22

ALTERATIONS AND ENHANCEMENTS

- Improve Extract to process very long quoted strings correctly.

VERSION 3.38.20

ALTERATIONS AND ENHANCEMENTS

- On exit, return exit status of last simulator to be executed in tty (lower) window.
- Prevent creation of extremely large temporary structure files by ignoring plotter commands when Victory Process is current simulator. A warning is issued.